

# Memtech Acoustical, LLC

*Your Source for Noise Control Solutions*

Memtech Acoustical, LLC  
2175 Avon Industrial Dr.  
Rochester Hills, MI 48309  
Phone: 248-289-1123  
Toll Free: 877-606-3940  
Fax: 248-289-6317

Sales@memtechacoustical.com

Product Information



[www.memtechacoustical.com](http://www.memtechacoustical.com)

## acouSTIC Adhesive

- Nontoxic, water-based adhesive
- Easy cleanup with soap and water
- Compatible with both polyurethane and willtec® foams
- Each 10.5-ounce tube installs up to 32 square feet of product
- Available in case quantities of 24 tubes
- Tube fits standard caulking guns or can be used with pinta's applicator gun (part number PA-01)




acouSTIC adhesive (part number PA-02) from pinta acoustic, inc. has been specially formulated to use with SONEX® Panels, FABRITEC Wall Panels, CONTOUR® Tiles and PROSPEC® Foams and Composites. This nontoxic, water-based adhesive makes installation hassle-free and provides a strong, permanent bond when adhering. Other adhesives may not be compatible with pinta products and may emit an odor.

### General Installation Notes

- Handle with care. Do not pick up or handle panels or tiles by the corners.
- Store right side up and flat in a clean, dry area protected from the elements. Do not sit on, or stack anything on top of cartons.
- Work with clean hands on a clean work surface. Wear clean cotton/canvas gloves for installation.
- Use a sharp razor or fixed-blade knife and a metal straightedge to cut panels or tiles. The blade should be long and sharp enough to cut through the entire thickness of the foam. An electric carving knife works well.
- For best results, cut panels from flat side.
- To create visual flow of the SONEX Valueline pattern, space each panel 1" from adjacent panels.
- When installing SONEX Classic or SONEX Junior, alternate the male and female patterns for a checkerboard look or install with 1" space between similar adjacent panels.
- Overhead installations may require additional support and cure time until adhesive sets.

### Installation with acouSTIC

- Make sure both the panels and the surface to which the panels are being applied are dust- and dirt-free. If adhering to a metal surface, use a degreaser.
- Cut end of adhesive tube to produce a 1/4" bead.
- First apply a 1/4" line of adhesive around the perimeter of the panel approximately 1" from the edge.
- Next, apply a 1/4" line of adhesive from opposite corners through the center of the panel, creating an "X."

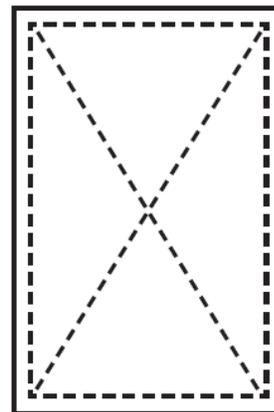

- Press panel into place and hold for 5 seconds. Then pull panel away from the surface for 1 minute to allow adhesive to become tacky.
- Press the panel back into position and hold again for 5 seconds.