


PHONSTOP™ Ceiling and Wall Tiles

Installation Instructions

PHONSTOP V Ceiling and Wall Tiles

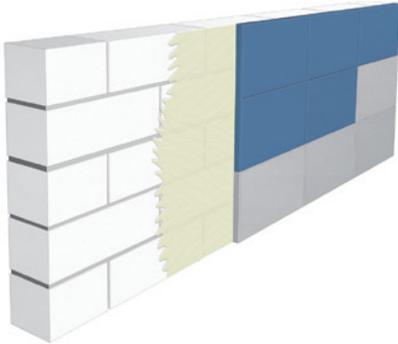

Adhesive applications to walls or ceilings:



- Prime structurally sound, relatively smooth, clean, dry and level wall or ceiling surface with PHONSTOP pt17 solvent-free primer.
 - Use a 1/4" (6 mm) nap roller for smooth surfaces.
 - Use a 3/8" (10 mm) nap roller for rougher surfaces.
 - Let dry 20 minutes or more.
- Adhere PHONSTOP to primer-treated surface.
 - Depending on desired design, orient the tiles with the square or beveled edge facing toward the exposed side.

- Using a mixing paddle on a corded drill, mix 1 bag of PHONSTOP pt81 adhesive with approximately 2 gallons (7.57 liters) of clean water per bag. Adjust for smaller batches, approx. 2 parts adhesive to 1 part water.
- Apply adhesive to the back of each tile using a 3/8" (10 mm) notched trowel.



- Be careful not to get any adhesive on the exposed tile faces.
- Place panel in desired location (maximum 30 minutes open time) and secure by gently moving the tile back and forth.
- PHONSTOP is sensitive to impact during installation.



- PHONSTOP can be cut with a hand or table saw.
 - Sand edges using a sanding block or another piece of PHONSTOP.

Interior finish:

- Can be custom colored with approved acoustical coating*.
- Unpainted outdoor, weather-exposed conditions:
- Using a roller or airless sprayer, apply 1 gallon (3.79 liters) of PHONSTOP pa13 sealer per 100 square feet (9.29 meters²) over the panels' permeable finished surfaces for additional durability.

Plastering* (seamless monolithic appearance indoors):


- Treat the seams with a skim coat – let dry 1/2 hour or more.
- Prime exposed PHONSTOP surface with PHONSTOP pt17 primer.
 - Use a 1/4" (6 mm) nap roller for smooth surfaces.
 - Use a 3/8" (10 mm) nap roller for rougher surfaces.
- Apply skim coat of PHONSTOP pa85 plaster.
- When completely dry (12 hours or more) apply a finish coat.
 - Do not add water to plaster.
 - Mix tub contents well with a mixing paddle.
 - Plaster should not be painted with oil- or latex-based paint. Use only approved acoustical coating.
 - Plaster is manually applied. As a result, the surface may be uneven.

PHONSTOP E Ceiling Tiles

Ceiling grid applications for ceilings:

- Fits pinta acoustic or any 15/16" (24 mm) ceiling grid systems.
- Drop ceiling tile into place.
- Gently press tiles from above (do not pull from the face) to snap them into the grid.
 - PHONSTOP is sensitive to impact during installation.

- To prevent soiling, wear clean cotton or canvas gloves to handle tiles.
- PHONSTOP can be cut with a hand or table saw.
 - Sand edges using a sanding block or another piece of PHONSTOP.
- Preferably install PHONSTOP at the end of the construction project.

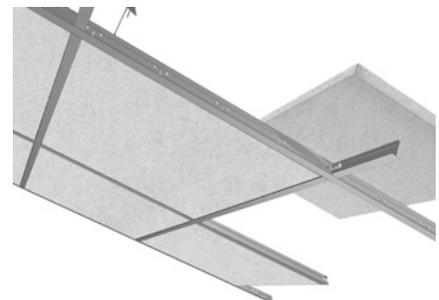

*Plaster and acoustical coating may only be applied by a certified applicator. Contact pinta acoustic for details.